


B5x upper software Operation guide

Note: B5x can only transfer files on the computer, and cannot control and operate the system on the computer.





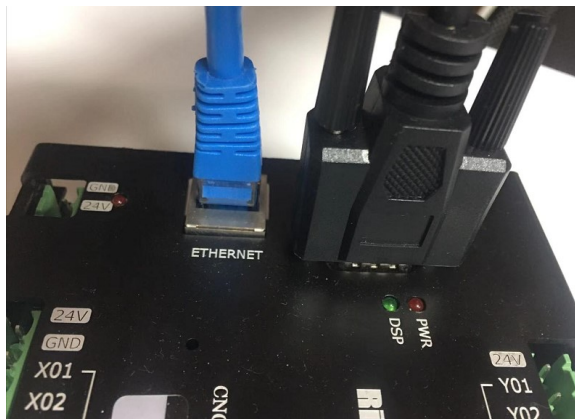


1. Connect the interface board to the computer with a network cable



2. Before you connect your interface card to the computer with network cable, you need to install the top computer and the attachment document is the top computer software

名称	修改日期	类型	大小
5X upper computer-New	2019/10/12 9:28	文件夹	
5X upper computer-New	2020/11/18 10:07	好压 ZIP 压缩文件	7,449 KB

3. After decompressing the file, find this file, this is the computer settings instruction before the host computer is installed

 READ AHEAD-INTRODCTION	2020/10/27 17:23	文件夹	
 DYNetCtrlTools	2016/5/9 10:26	应用程序	654 KB
 DYNetCtrlTools-	2014/9/22 13:16	应用程序	654 KB
 msvcr110d.dll	2012/11/6 1:20	应用程序扩展	1,658 KB
 zImageEngine.dll	2013/12/19 12:37	应用程序扩展	235 KB
 zRichAutoBase.dll	2013/12/19 12:37	应用程序扩展	824 KB
 zWin32UIBase.dll	2013/12/18 17:02	应用程序扩展	328 KB

4. Double-click the host computer to transfer files

